4 SUPPORT - FAQ / TROUBLESHOOTING

If you have any issues, please CLICK or SCAN the QR Code and read our FAQ section.

Alternatively, email: support@tandeltasystems.com

4.1 Full OQH Sensor Kit User Guide

You can find further information in the OQH SENSOR KIT User Guide on the downloads page of our website:

www.tandeltasystems.com/downloads

If you have any further questions, please contact our support team.

Tan Delta Systems (TDS) Ltd

Copyright © Tan Delta Systems (TDS) Ltd


1 Carrera Court, Church Road,
Dinnington, Sheffield UK
S25 2RG
Tel: +44 (0)845 094 8710
Email: support@tandeltasystems.com

OQH SENSOR KIT
QUICK START GUIDE

TANDELTA
Oil Condition Monitoring

Copyright © Tan Delta Systems (TDS) Ltd

What's in the box Product Code: OQH Sensor Kit	
Item	Description
1	**OQSx-G2 HAZ Oil Condition Sensor**
2	**CAB-X** HAZ Sensor Configuration Cable
3	Product USB including **TD Config** configuration software
4	Quick Start Guide

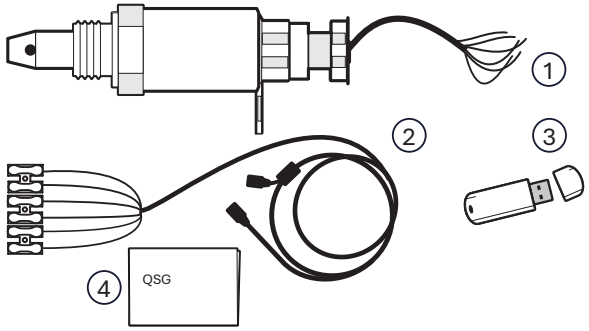

Check that your kit contains all the items shown.

1 CONFIGURATION AND INSTALLATION OVERVIEW

WARNING

The sensor MUST be configured OUTSIDE the hazardous area before installation. Only suitably trained personnel should install the sensor.

To configure and install the sensor, you will need the following:

- A Windows PC or Laptop on which you have **Administrator** rights.
- Tan Delta **TD Config** configuration software.

TD Config is provided on the USB drive ③ supplied with your Sensor.

Alternatively, it is available for download online at:
www.tandeltasystems.com/setuptdconfig


The configuration and installation process involves the following steps:

- Install TD Config.
- Configure the OQSx-G2 HAZ Oil Condition Sensor in TD Config.
- Install the sensor on your asset.
- Check the system for correct operation.


Document Part Nº 201-1010-5

2 CONFIGURING THE OQSX-G2 HAZ OIL CONDITION SENSOR

1) Insert the Tan Delta USB drive into a USB port on your computer.
2) When prompted, select **Open folder** to view files.
3) Launch the **TDConfig_Installer** file and follow the instructions in the setup wizard.
4) When prompted, click on **Install**.
   When installation is complete, **TD Config** is home page is displayed.
5) Allow the PC/laptop to automatically update drivers, if needed.
6) From the TD Config main menu, select **Configure Sensor**.
7) Connect the **Sensor** ① to the **Configuration cable** ②.

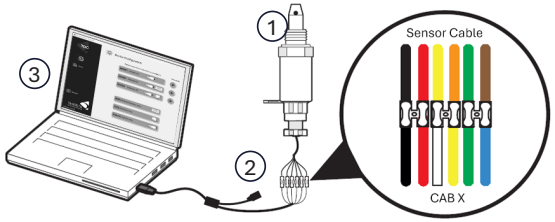

8) TD Config will display a list of available sensors, identified by their serial numbers. Select the required Sensor by checking its Serial Number.

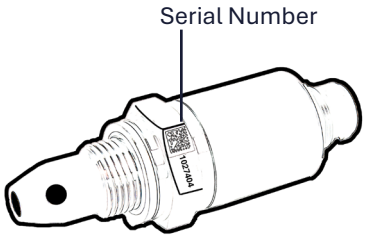


9) Next, choose the required communication type by selecting the device or communication type you intend to use with the sensor:
   - Display Express for use with SENSE-2 or using the 4-20mA analog signal.
   - Custom Settings to setup digital communication to suit your system.
10) Select the oil in which you want to use the sensor.

NOTE
If the oil you use is not in the oil database, contact your distributor or Tan Delta support for assistance.
support@tandeltasystems.com

3 INSTALLATION AND CONNECTION

WARNING
Only suitably trained personnel should install the sensor.

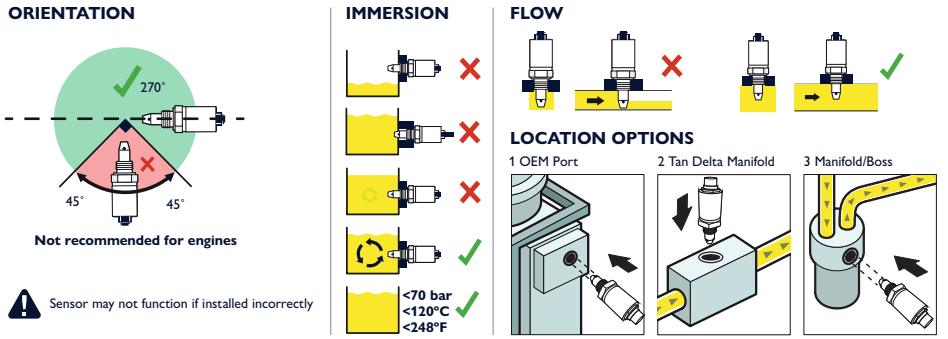


IMPORTANT
The sensor nose must be submerged completely in oil for accurate results.

3.1 Electrical Connections

The OQSx-G2 HAZ Oil Condition Sensor **must** be connected through a Zener Barrier (not supplied). The cable colours and functions are shown below. For full details of the barrier requirements please refer to the OQH Sensor Kit User Guide, available at:

www.tandeltasystems.com/downloads

The Sensor requires a power supply of 10-28.8V DC.

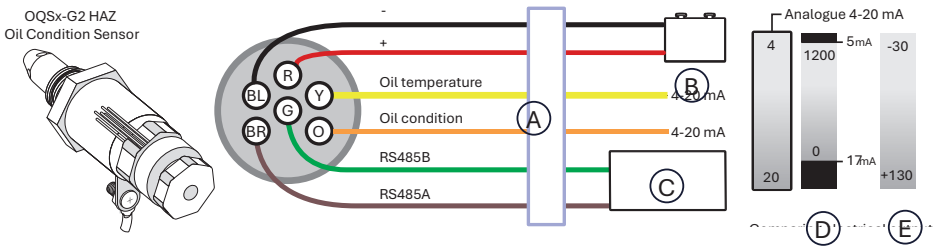

Item	Description
A	Zener Barrier
B	10 - 28.8 V DC
C	Digital RS485 Modbus CANbus
D	Oil Condition (Tan Delta Number)
E	Oil Temperature (°C)

Comparing electrical output with Oil Condition and Temperature